



# 800 Series Strain Gage Pressure Transducers and Transmitters

The following models are covered in this manual:  
830, 831, 832, 850, 851, 860, 861

# Operating Manual



## CONTENTS

1. Description	3
2. Model Number Construction	3
3. Pressure Fitting	3
4. Electrical Connections	4
5. Electrical Characteristics and Wiring	5
6. Operation and Calibration	6
7. Repair	7
8. Warranty	7



## 1. DESCRIPTION

Dynisco’s 800 Series of Pressure Transducers and Transmitters are bonded foil strain gage type, designed to measure pressures up to 60,000 psi. These transducers convert changes in applied pressure into corresponding changes in output voltage or current.

## 2. MODEL NUMBER CONSTRUCTION

The model number designates the features of the 800 Series pressure transducers.

### Model 1234X-567-8-9

- 1 = Pressure Reference
- 2 = 800 Series
- 3 = Full Scale Output
- 4 = Accuracy
- X = Approval
- 5 = Pressure Port Thread
- 6 = Electrical Termination
- 7 = Wiring
- 8 = Pressure Range\*
- 9 = Options

\*Pressure range is noted on label.

For complete details, refer to the individual ordering guides for each model.

## 3. PRESSURE FITTING (POSITION 5 OF MODEL NUMBER)

The pressure port thread of the standard 800 Series (Code 0 in the model number) is internal 1/8 -27 NPT fabricated from high strength stainless steel.

Options available include the following:

Code in Model No.	Description
1 .....	1/4 -18 NPT, internal
2 .....	7/16 -20 UNF, internal, O-ring, per MS33649-4
3 .....	High Pressure, internal fitting per autoclave F-250-C
4 .....	1/4 -18 NPT, external
5 .....	1/2 -14 NPT, external
6 .....	7/16 -20 UNF, external, per MS33656-4
7 .....	R 1/4 -metric, external
8 .....	3/4 -16 UNF, external, flush diaphragm**
9 .....	Special (consult factory)
A .....	7/16 -14 BSP, external
B .....	7/16 -14 NPSM, external
C .....	Autoclave F-562-C



- D ..... 1" BSP, internal
- G ..... Autoclave F-375C

\*\*Each flush diaphragm transducer or transmitter is shipped with a DYNASEAL™, Dynisco P/N 633014, for the pressure port seal. Recommended torque, for an adequate seal, is 100 in-lbs. Care should be exercised with the low pressure ranges. The flush diaphragm can be inadvertently overloaded with thumb pressure, which can be the equivalent of several hundred psi.

#### 4. ELECTRICAL CONNECTIONS (POSITION 6 OF MODEL NUMBER)

**Code 0 in the model number** — Standard 800 Series models have a Bendix Connector PT02A-10-6P (or equivalent) and require mating connector PT06W-10-6S (SR) (Dynisco P/N 711600).

**Code 1 in the model number** — 800 Series Models with the weathertight option include Bendix PT02H-10-6P (or equivalent) and require mating connector PT06W-10-6S (Dynisco P/N 711610).

**Code 3 in the model number** — Option for the 1/2 -14 NPT conduit fitting with the 4 ft six conductor cable.

##### WIRING CODE — Transducers

Function	Pin	Color
Output (+)	A	Red
Output (-)	B	Black
Input (+)	C	White
Input (-)	D	Green
Shunt Cal.	E, F	Blue, Orange

**Code 4 in the model number** — 800 Series can come equipped with 1/2 -14 NPT conduit fitting and three 42" leads.

##### WIRING CODE — Transmitters

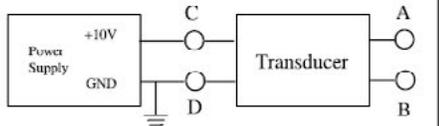
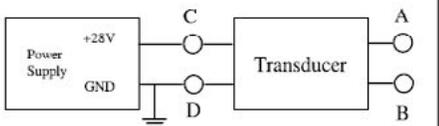
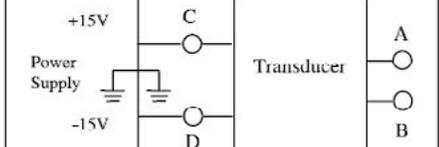
Function	Pin	Color
Supply Voltage (+)	A	Red
Supply Voltage (-)	B	Black
Case Ground		Green

Transmitters incorporate reverse polarity protection, but will not function if inputs are reversed.

**ALL WIRING MUST CONFORM TO NATIONAL ELECTRICAL CODE.**

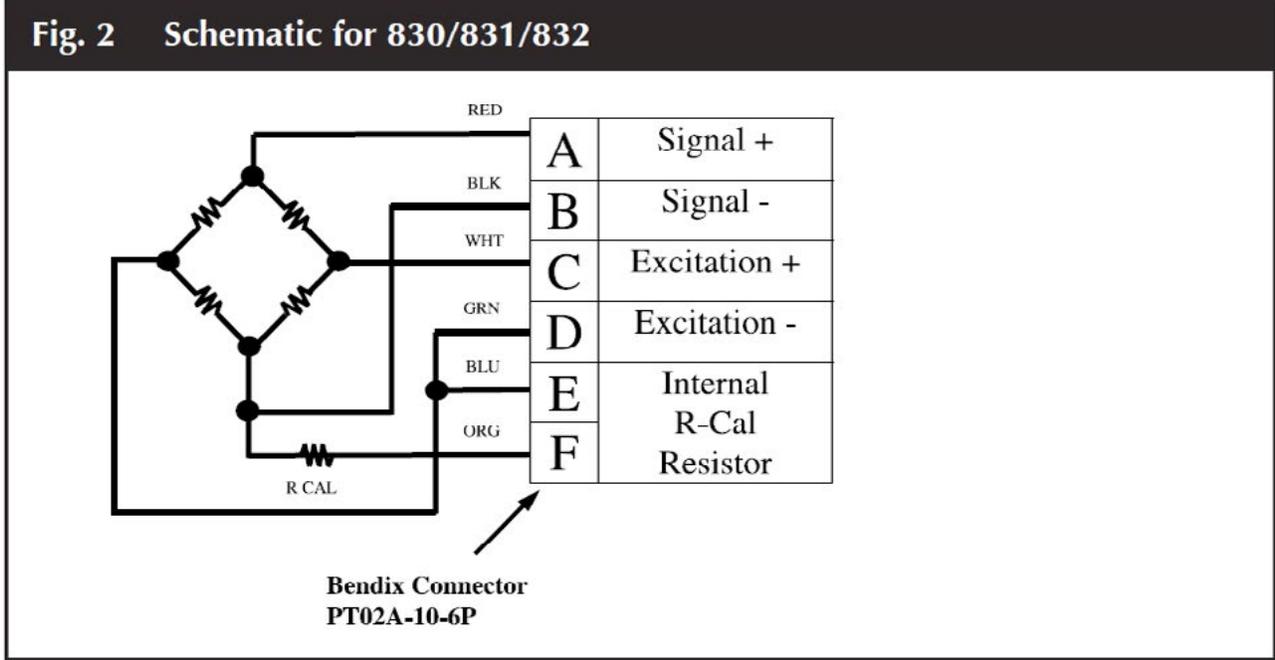
## 5. ELECTRICAL CHARACTERISTICS AND WIRING

**Fig. 1 Power Supply Requirements and Typical Wiring Diagrams**

TRANSDUCER MODEL	OUTPUT	POWER SUPPLY	WIRING DIAGRAM
830 831 832	3 mV/V	10 Vdc (Recommend) 15 Vdc (Maximum)	
850/851 860/861	0 - 5 Vdc 0 - 10 Vdc	Single 24 ñ 32 Vdc	
850/851 860/861	0 - 5 Vdc 0 - 10 Vdc	Split 85X 12 - 16 86X 14 - 16	

### MODELS 830/831/832

Transducers with 3 mV/V output require a well regulated power supply and have a nominal load of 350 ohms. The mV readout should present a high impedance input and have good common mode rejection. Use of six conductor shielded cable (like Dynisco P/N 800024) is recommended to minimize noise pickup.



**MODELS 840/841/850/851/860/861**

Dynisco high level output transducers and transmitters have a voltage regulator, signal conditioner, and amplified incorporated within the device. These models have accessible ZERO and SPAN adjustments. These are factory set and should not require adjustment.

Voltage output devices have a current drain of 45mA maximum at recommended minimum load of 2000 ohms.

**CONDUIT FITTING** — Units with the 1/2 -14 NPT conduit fitting and leads or cable, should be installed using appropriate conduit or junction box in conformance with local codes. This is essential for environmental protection of the electrical termination.

**6. OPERATION AND CALIBRATION**

After the transducer and the readout have been installed, the system must be calibrated using either a precision pressure source such as a dead-weight tester, or by using the shunt calibration function.



**PRESSURE CALIBRATION** — With no pressure applied, the signal conditioner ZERO control (or ZERO adjustment of high level output transducers) is adjusted for zero pressure indication on the readout. With a known pressure applied to the transducer (typically 80 to 100% of full scale), the signal conditioner SPAN control (or SPAN adjustment of high level output transducers) is adjusted for the correct readout of the applied pressure.

**SHUNT CALIBRATION** — All 800 Series pressure transducers (except 840/1 transmitters) contain an internal Shunt Calibration resistor (R-CAL) which provides a simulated output of 80% of full scale when pins E and F are shorted. Do not apply pressure to the transducer during calibration. Refer to instructions with the instrumentation for details on ZERO and SPAN adjustment.

## 7. REPAIR

Questions concerning warranty, repair cost, delivery, and requests for a RA# should be directed to the Dynisco Repair Department, 508-541-9400 or email: [repair@dynisco.com](mailto:repair@dynisco.com). Please call for a return authorization number (RA#) before returning any product. Damaged products should be returned to:

**DYNISCO LLC**

Attn: RA # \_\_\_\_\_

38 Forge Parkway

Franklin, MA 02038

For technical assistance please call 800-DYNISCO or 508-541-9400 or fax 508-541-9436.

## 8. WARRANTY

This Dynisco product is warranted under terms and conditions set forth in the Dynisco Web Pages. Go to [www.dynisco.com](http://www.dynisco.com) and click on “Warranty” at the bottom of any page for complete details.



From lab to production,  
providing a window into the process



### WARRANTY REGISTRATION CARD



MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

DATE PURCHASED \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

NAME \_\_\_\_\_

COMPANY \_\_\_\_\_

DIVISION \_\_\_\_\_

STREET \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

COUNTRY \_\_\_\_\_

TELEPHONE \_\_\_\_\_ FAX \_\_\_\_\_

My application is \_\_\_\_\_

Is this your first purchase from Dynisco?      YES \_\_\_\_\_      NO \_\_\_\_\_

How did you first hear of Dynisco?      ADVERTISING \_\_\_\_\_      REP \_\_\_\_\_

PREVIOUS USE \_\_\_\_\_      COLLEAGUE \_\_\_\_\_      DIRECTORY \_\_\_\_\_

I need further product information on \_\_\_\_\_

I need application help on \_\_\_\_\_

Please send complete catalog \_\_\_\_\_

Tel.: 508-541-9400 Fax: 508-541-9436 E-mail: [www.dynisco.com](http://www.dynisco.com)

**PLEASE FOLD AND STAPLE OR TAPE**



From lab to production,  
providing a window into the process



Place  
Stamp  
Here

DYNISCO LLC  
38 FORGE PARKWAY  
FRANKLIN, MA 02038

ATTN: MARKETING DEPT.



DyniscoLLC  
38 Forge Parkway  
Franklin, MA 02038  
USA

Tel: +1 508 541 9400  
Fax: +1 508 541 9436  
Email: InfoInst@dynisco.com

Dynisco Extrusion  
1291 19th St Ln NW  
Hickory, NC 28601

Tel: 828-326-9888  
Fax: 828-326-8882  
Email: InfoExtr@dynisco.com

Dynisco Europe GmbH  
Wannenäckerstraße 24  
74078 Heilbronn  
Deutschland

Tel: +49 7131 2970  
Fax: +49 7131 23260  
Email: DyniscoEurope@dynisco.com

Dynisco Instruments S.a.r.l.  
466, rue du Marché Rollay  
94500 Champigny sur Marne  
France

Tel: +33 1 4881 8459  
Fax: +33 1 4881 8334  
Email: DyniscoFrance@dynisco.com

Dynisco.s.r.l.  
Via Adriatico, 2/2  
20162 Milano  
Italia  
Tel: +39 02 661 01733  
Fax: +39 02 661 02908  
Email: DyniscoItaly@dynisco.com

Dynisco UK Ltd.  
Silver Birches Business Park  
Aston Road, Bromsgrove  
Worcestershire B60 3EU  
Great Britain

Tel: +44 1527 577077  
Fax: +44 1527 577070  
Email: DyniscoUK@dynisco.com

Dynisco SPOL, S.R.O.  
cp. 579  
756 55 Dolni Becva  
Czech Republic

Tel: +42 0571 647228  
Fax: +42 0571 647224  
Email: Dynisco\_cz@ova.pvtnet.cz

Dynisco B.V.  
Muziekplein 67  
PO Box 666  
NL-5400 AR Uden  
The Netherlands

Tel: +31 413 250665  
Fax: +31 413 260548  
Email: Dynisco-BV@dynisco.com